# Choosing the right Backing Gate for your yard

Standard and Optional Features

## Reporoa Herdflow Crowd Gate Reporoa Herdflow High Lift Gate



#### **Standard Features**

Standard reactives	HIGH LIFT GATE	CROWD GATE
Sale Price is Instaled and operating	<b>✓</b>	<b>✓</b>
Runs on "I" Beam (anti de-rail)	<b>✓</b>	✓
Drives on side of "I" Beam	×	✓
Drive on the top of "I" Beam	<b>✓</b>	*
<b>Has breech sensor as standard</b> (prevents bulldozing of cows)	*	<b>✓</b>
Has audible alarm	<b>✓</b>	✓
2 speed forward and reverse	<b>✓</b>	✓
Pulse forward auto-stop	<b>✓</b>	✓
Gate pause when lowering	<b>✓</b>	✓
Spans16 Metres (We can span further on a case by case basis)	~	✓
High / Low rail options (optional 1200 mm to 1700 mm heights)	<b>✓</b>	✓
Bolt together	<b>✓</b>	✓
Pre-wired Plug & Play Electrical System	<b>✓</b>	<b>✓</b>

#### **Optional Extras**

Manual Dungbuster Wash System	✓	×
Fully Automated Dungbuster Wash System	×	✓
Cow Detector (Prevents cows being crushed while lowering gate)	*	✓
Gate Camera with screen	×	✓
Breech Sensor	✓	Standard
Bail Counter	✓	✓
4 Wheel Drive	✓	✓
Dual Controls (Rotary)	✓	✓
Pull Cord Stop/Start (Herringbone)	✓	✓

#### **Optional Extras (continued)**

Remote Control	*	<b>✓</b>
Visual Light & Siren on Console	<b>✓</b>	✓
Additional Audible Alarm	<b>✓</b>	<b>✓</b>
Sprinkler/Cow Yard Wetting	<b>✓</b>	<b>✓</b>

### Farmers Responsibility:

- $^{"}$  Supply single phase electricity, 230 volts plus neutral and earth to the front corner of the yard & terminate wires to the gates front of yard control box which is supplied with the gate.
- » Supply 18 core cable (communication grade) between front corner of collecting yard and operators console & terminate wires to the front of yard control box & console button set.
- » Supply a front end loader at time of unloading and installation.
- » Fully read the "Customer Yard Information"